 



Niez Tech-INSIDE CUTTING TOOL 1.0 PARTS LIST		
ITEM	PART NUMBER	DESCRIPTION
1	CORING MACHINE	NOT INCLUDED
2	ICT-01	DRIVE SHAFT
2.1	ICT-01A	OUTER DRIVE SHAFT
2.2	ICT-01B	INNER DRIVESHAFT
3	ICT-02	HANDLE
4	ICT-03A	SAW BLADE (4IN)
7	ICT-04	SPRING WASHER
8	ICT-05	FLANGE NUT

## INSTRUCTIONS:


- 1**
- Attach saw blade 4 in clockwise orientation
  - Install spring washer 7 with wide side down
  - Tighten nut with one wrench on flange nut 8, and one wrench on outer drive shaft 2.1



- 2**
- Install tool onto coring machine 1
  - Tighten tool with wrench on inner drive shaft 2.2

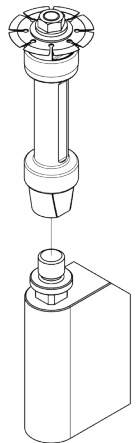

- 3**
- Hold tool by handle 3
  - Install tool into Utility Pipe

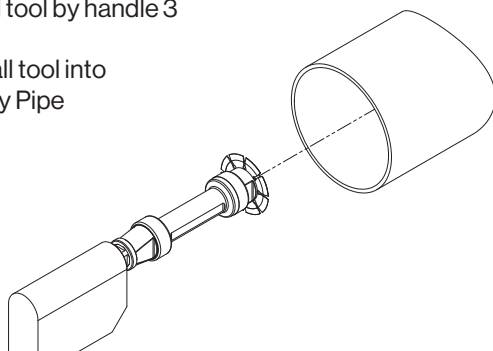

- 4**
- Start coring machine
  - Plunge tool into pipe
  - Cut pipe in clockwise motion

